

KP-ICON-OEM


 


Specifications:

Voltage: +10 to +15VDC
 (from a Battery Backed up PSU)
 Current: 50mA (Standard model)
 100mA (Prox model)
 Maximum Cable Length: 100m (4C2 0.2mm²)
 200m (4C5 0.5mm²)
 125KHz RFID Prox Reader (Prox model only)
 Dimensions: 134(w) x 88(h) x 24(d)mm

Compatible with:

ESL-2, ESL, Elite-S, Elite-S Lite and AC-2W
 *A maximum of 8 KP ICON OEM Keypads should be connected these systems.

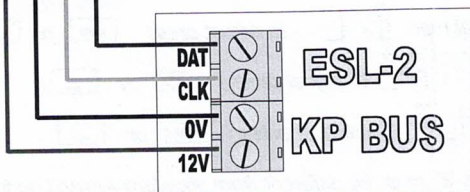



Web Link to full Keypad User Guide



KP ZONE INPUT Specifications:

By turning On option 6 at address P900E in local edit mode, the terminal labelled Input can be programmed to act as a zone on the Elite S. The zone number relates to the Prox Reader Keypad Address, i.e. if Prox Address is 8, the zone can be 8 or 16 (this address can be changed in local edit mode, at P 907 E). You will need to tell the panel to look for the keypad zone by turning On option 4 under P 122 E (zone number 1-16) E. *By default the Input terminal is setup for the Listen-in feature. Feature available on both KP-ICON-OEM & KP-ICON-OEM P version 2 only.*

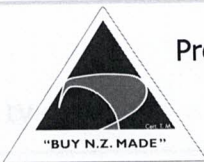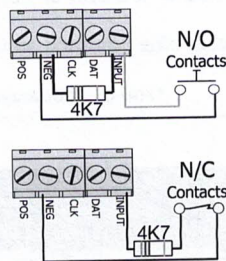

Proudly Designed and Manufactured in New Zealand
 By Arrowhead Alarm Products Ltd

LOCAL EDIT PROGRAM MODE

Local Edit Mode gives you the ability to adjust some individual keypad functionality.

Including: 12/24 hour time, Temperature display, KP Tamper, KP software version, KP Address, Calibrate Temperature, Backlight Brightness, Display Contrast and Beeper Tone.

To **Enter** Local Edit Mode, please press then then

The display will then read

To **Exit** Local Edit Mode, please press then

Once in Local Edit Mode use the programming addresses below to make changes if required.

P= E = To Increase press To Decrease press

P 900 E **1 ON** = 12-hour clock, **1 OFF** = 24-hour clock
2 ON = Clock and Temperature displayed alternatively, **2 OFF** = Clock Only
3 ON = Display Temperature when ENTER button is pressed, **3 OFF** = Feature disabled
4 ON = Enable Keypad Tamper (*Not available on this Keypad*)
5 ON = All Lights will turn off after 90seconds of inactivity.
6 ON = Input is Keypad Zone, **6 OFF** = Input is Listen-in feature

P 901 E **Keypad Software Version**, the KP current software version will be displayed.

P 902 E **Keypad Address** (1-8) keypads on the same system must each have a different address

P 903 E **Calibrate Temperature Sensor**, the current temperature will be displayed.
(Warning don't adjust this location unless you have a calibrated temperature source available)

P 904 E **Backlight Brightness**, display will read **B/L** to adjust press or

P 905 E **LCD Contrast**, display will read **CTR** to adjust press or

P 906 E **Buzzer Tone**, display will read **BUZ** to adjust press or

P 907 E **Prox Reader Keypad Address** (1-8) must be different from standard Keypad address.
Prox Reader Feature also assigns Zone input option see below. (Default KP7)

P 920 E **Default** all Keypad Local Edit Programming Options will be returned to factory default.

Note, after adjusting any programming options, must be pressed to save changes.

**You can not access Local Edit Mode if the system is Armed or Stay Armed*



Arrowhead Alarm Products Ltd

ARROWHEAD ALARM PRODUCTS Ltd.

344B ROSEDALE Rd

ALBANY

AUCKLAND

Phone: 09 414 0085

Fax: 09 414 0088

www.aap.co.nz

V1.0